hand blender instructions 7/15/03 10:38 AM Page 1

GIOVANNA
Italy

by

Deni®

Hand Blender

Includes Recipes

Model 4400

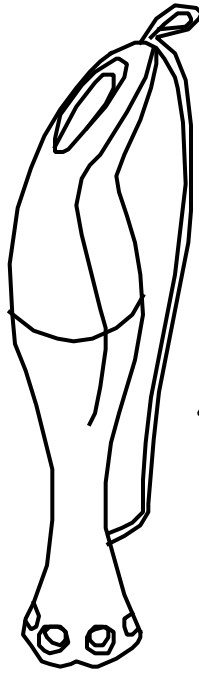

IMPORTANT!

Please keep these instructions and your original box packaging.

www.deni.com

INSTRUCTIONS

FOR PROPER USE AND CARE

hand blender instructions 7/15/03 10:38 AM Page 1

GIOVANNA Italy by Deni

IMPORTANT SAFEGUARDS

When using this electrical appliance, safety precautions should always be observed, including the following:

- **Read all of the instructions.**
- Do not let the cord hang over the edge of the work space or touch any hot surfaces.
- Place the unit securely in the center of the counter or work space.
- Close adult supervision must be provided when this appliance is used by or near children.
- Avoid any contact with moving parts. Fingers, hair, clothing, etc., as well as other utensils, should be kept away from blades during operation.
- Using attachments not recommended or sold by Keystone Manufacturing Co., Inc. may cause hazards.
- Do not operate with a damaged cord. Return the unit to a repair center or have it repaired by a licensed electrician.
- Always unplug before cleaning and removing parts.
- For indoor use only.
- Do not place near hot gas or electric burner.
- Do not use the unit without closing the lid.
- Do not continuously operate the unit for more than 60 seconds.
- Do not operate appliance over a stove or any other heat source.
- Do not clean with metal scrubbing pads. Pieces can break off the pad and short-circuit electrical parts, creating a possibility of an electrical shock.
- To protect against electrical shock, do not immerse plug, cord or motor base in water or any other liquid.
- Do not use an extension cord with this unit. However, if one is used, it must have a rating equal to or exceeding the rating of this appliance.
- This unit is for household use only.
- This unit should not be used for other than the intended use.
- The Hand Blender has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way, as a safety feature. Reverse the plug if the plug does not fit fully in the outlet. Contact a qualified electrician if it still does not fit. Do not attempt to defeat this safety feature.
- Blades are sharp, handle carefully.
- When mixing liquids, especially hot liquids, use a tall container and make several small batches to avoid spillage.

SAVE THESE INSTRUCTIONS

FEATURES AND FUNCTIONS

Features

- **Measuring / mixing jug**
  Handy container for holding and measuring ingredients to be mixed. Comes with a partially openable lid for easy adding and pouring.
- **On / off switch and ergonomic grip**
  Comfortable grip allows you to easily operate the unit and start and stop it quickly.
- **Stem**
  Sleek design offers protection from the blades.
- **Blades**
  Contained inside the stem, the blades are applied directly to the food to be blended for convenient mixing.
- **Hanging Hook**
  For easy storage of the unit.

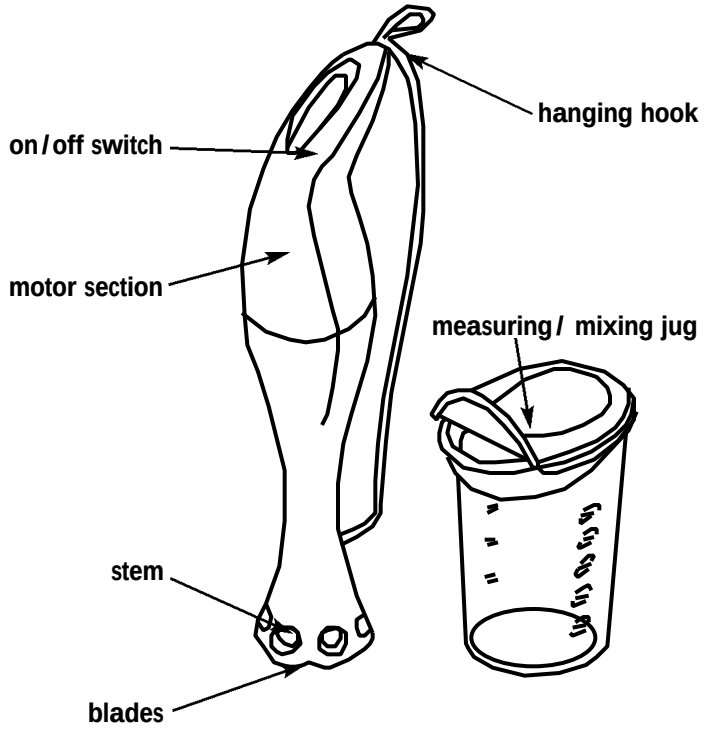

GIOVANNA Italy by Deni®

Before First Use

1. Remove the Hand Blender from the package and remove all packing materials. Read all instructions carefully.
2. Wash the blade portion of the hand blender according to instructions.

HOW TO OPERATE THE DENI HAND BLENDER™

1. Position the provided measuring/mixing jug or a container of comparable size that holds the food to be mixed on a flat surface.
2. Pour the ingredients to be blended in the measuring jug provided or into a container of comparable width and depth and avoid over-filling. For best results for non-liquid items, evenly distribute the contents using a palette knife.
3. Place the blender in the measuring jug and position it directly on the food to be blended. Hold the container steady with your other hand.
4. Press the on/off switch to the ON position.

   IMPORTANT Do not let the machine operate continuously for more than 60 seconds.

   It is advisable to press the on/off switch for a few seconds only and repeat this operation in intervals. This makes it possible to continually check the consistency of the food. After each use of 60 continuous seconds, the unit must cool down for 3 minutes.
5. Move the blade slowly through the food. Be sure to move it up, down and sideways to ensure thorough mixing. When contents to be blended are at the desired consistency, turn the blender to the OFF position and unplug. Remove it from the measuring/mixing jug.
6. If some of the food remains on the blades of the blender, use a palette knife to delicately remove it from the blade. NEVER use your fingers to remove the food, to avoid injury from the sharp blades.
7. Wait until the blades in the blender have completely stopped rotating before attempting to remove food or to clean the unit.
8. Unplug blender and rinse under running water immediately after using for easy cleanup.

NOTE: Always unplug from outlet when not in use.

HELPFUL HINTS AND TIPS

- **Read all of the instructions.**
- If you are using the hand blender in a sauce pan, be sure to remove the sauce pan from the stove or other heat source before applying the blender to the food to be mixed. This appliance is not to be used over a stove or any other heat source.
- If you are pureeing food, slowly add liquid, a little at a time, until desired consistency is reached.
- Do not use this appliance to chop ice, as it can damage the blades. Add any ice to the mixture after the blending process is completed.
- Do not use this unit to beat egg whites.

HOW TO CLEAN

- Unplug the hand blender from the outlet.
- Rinse the blade under warm running water by holding the unit by the motor section. DO NOT TOUCH THE BLADE. DO NOT IMMERSE THE MOTOR SECTION IN THE RUNNING WATER.
- Motor section may be wiped clean with a damp cloth.
- If food particles are not rinsed off under the running water, place a drop of dish detergent in the measuring jug and fill half way with water. Plug cord back into outlet. Immerse the hand blender in the water and operate the unit for about 10 seconds. Unplug, and rinse again under running water to remove excess detergent.
- Never wash any parts in a dishwasher.

GIOVANNA by Deni®

CUSTOMER SERVICE

If you have any questions or problems regarding the operation of your Giovanna Italy by Deni Hand Blender, call our customer service department toll free:

Monday through Friday
8:30 a.m. to 5:00 p.m.
(Eastern Standard Time)
1-800-DENI-822

www.deni.com

Deni by Keystone Manufacturing Company, Inc.®

ONE-YEAR LIMITED WARRANTY

Your Giovanna Italy by Deni Hand Blender is warranted for one year from date of purchase or receipt against all defects in material and workmanship. Should your appliance prove defective within one year from date of purchase or receipt, return the unit, freight prepaid, along with an explanation of the claim. If purchased in the U.S.A. or other country, please send to: Keystone Manufacturing Company, Inc. 33 Norris Street, Buffalo, NY 14207. If purchased in Canada, please send to: Keystone Manufacturing Company, Inc., 151 Cushman Road, St. Catherines, Ontario L2M 6T4. (Please package your appliance carefully in its original box and packing material to avoid damage in transit. Keystone is not responsible for any damage caused to the appliance in return shipment.) Under this warranty, Keystone Manufacturing Company, Inc. undertakes to repair or replace any parts found to be defective.

This warranty is only valid if the appliance is used solely for household purposes in accordance with the instructions. This warranty is invalid if the unit is connected to an unsuitable electrical supply, or dismantled or interfered with in any way or damaged through misuse.

We ask that you kindly fill in the details on your warranty card and return it within one week from date of purchase or receipt.

This warranty gives you specific legal rights. You may also have other rights which vary from state/province to state/province.

1999 © Keystone Manufacturing Company, Inc.